

BRUCE TV QUICK START GUIDE

Introduction

Welcome to Bruce TV!

The set-top box is your gateway to Bruce TV interactive television service
Including:

Favourite Channels
Video on Demand
Personal Video Recorder (optional)
Parental Locks

Your full guide to accessing these services through the remote control unit can be found at www.brucetelecom.com under Digital TV.

NOTE: If requested, default password is 1 2 3 4.

1. Initial Startup

When you connect power to your set-top box *for the first time*, it will update and configure itself.


IMPORTANT: Do not disconnect power to the set-top box until Startup is complete. This will take up to 10 minutes. During this time the set-top box will shut down and start up again, lights may flash or blink, and messages will appear on your TV screen.

Startup is complete when the TV starts playing.

2. Basic TV Controls

You can control all Bruce TV services from the remote control.

Change the channel

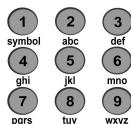

Using **Number** buttons, enter the channel number.

 
~ OR ~



On the **CH (Channel)** buttons, press + or - to scroll up or down one channel at a time.

View current channel Information

See a description of the program you're watching plus Current Channel information.



View the channel guide

- **Guide** Press the **Guide** button to see a Channel Guide.

Press once for **My Channels** (channels you subscribe to currently).

Press twice for **Favourites** (channels you've set as favourites).



Exit

Press **Exit** to clear the channel guide.

If you don't exit, the Guide window will time out after a few moments of inactivity.

Access menus

The **Main Menu** is the gateway to most Bruce TV features.

On the remote control, press arrow keys (◀ ▶ ▲ ▼) to make your menu selection, and then press **OK**.



Press **MENU** to access the Main Menu.



Press the blue diamond button to return to the previous menu.



Exit

Press **Exit** to clear all menus from the screen.


Video on Demand (VOD)

Lets you rent movies for immediate viewing.







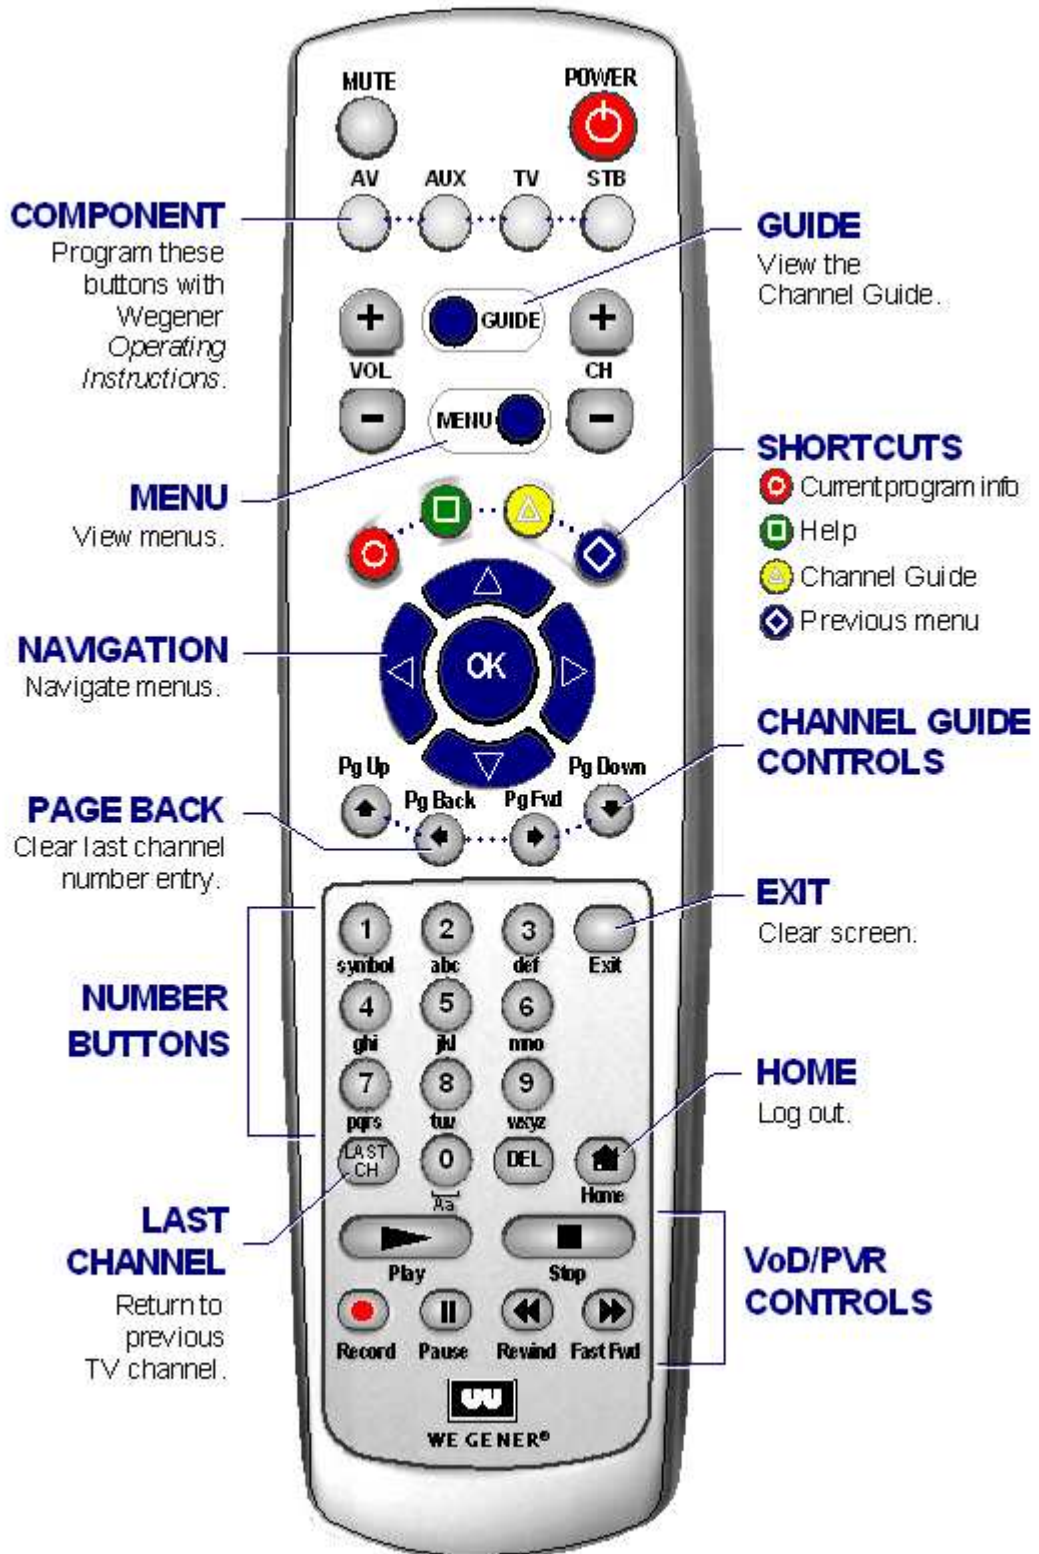

 











Access this service by pressing the Menu button and select **Video on Demand**.

Full instructions are available at www.brucetelecom.com. If you require a printed copy please contact us at 519 368-2000 or stop into one of our stores.

Remote Control Functions



Remote Control Functions (cont.)

Button		Function
	MUTE	Mute the volume. Press again to resume previous volume setting.
	POWER	Put set-top box in/out of Standby mode.
	AV, AUX, TV	Activate alternate modes on the remote control. Program these buttons with Wegener <i>Operating Instructions</i> .
	STB	Activate the <i>set-top box</i> (STB) mode on the remote control.
	GUIDE	Display the interactive Channel Guide.
	MENU	Display the Main Menu.
+ / -	VOL	Raise or lower TV volume.
+ / -	CH	Switch the channel number up or down.
<i>SHORTCUTS</i>		
	Program Info	Display current program information.
	Help	Display Help .
	Channel Guide	Display channel 'Favourites'; press again for Channel Guide.
	Previous Menu	Display previous menu or window.
<i>MENU NAVIGATION</i>		
	arrow	Navigate among selectable items on the screen.
	OK	Select a highlighted item. Scroll through options.
<i>CHANNEL GUIDE CONTROLS</i>		
	Pg Up/Down	Display previous/next group of channels.
	Pg Back/Fwd	Display previous/next time period.
	Rewind/Fast Fwd	Jump to previous/next day.
<i>NUMBER BUTTONS</i>		
1, 2...0	number	Select channel or enter login password.
	Exit	Clear the menu or screen.
	LAST CH	Return to previous TV channel.
	Home	Reload the set-top box.
<i>VIDEO ON DEMAND CONTROLS</i>		
	Play	Play video. Resume normal play from Rewind , Fast Fwd , or Pause .
	Stop	Stop the video.
	Record	Record video to a personal video recorder (PVR).
	Pause	Pause the video. (Press  to resume where you paused.)
	Rewind	Move video backward. (In Channel Guide, jump to previous day.)
	Fast Fwd	Move through video quickly. Press repeatedly to increase speed. (In Channel Guide, display next day.)